



If you are using the Mtronics dual micro switch, you need to set one of the two outputs for latched (Engine start/stop) and the other to non-latched (horn). Each respective white wire goes to the AUX on the sound unit and the ribbon cable goes to a sprung centre off transmitter channel or CH3 on my own receivers so that the two top buttons on my transmitter sound the horn or start and stop the engine. **ALWAYS TRIPLE CHECK YOUR WIRING!** Every component above HAS been checked prior to shipp